



HUB538 - Pro 4 Freehub Assembly Hope Aluminium

ITEM No.	PART No.	DESCRIPTION	QTY.
1	HUB1009-51S	Pro 4 Hope Freehub Spacer - Silver	1
2	17287	17x28x7 Bearing	1
3	S17287	17x28x7 Bearing	1
4	HUB1009-18	Pro 4 1mm Barrel Spacer	1
5	HUB535	Pawl (set of four)	1
6	HUB515	Pawl spring (set of four)	1
7	HUB1009-5	Pro 4 Drive Side Seal	1

HUB537 - Pro 4 Freehub Assembly XX1/XD

ITEM No.	PART No.	DESCRIPTION	QTY.
1	HUB1009-45S	Pro 4 XD Freehub Spacer - Silver	1
2	17287	17x28x7 Bearing	1
3	S6803	Stainless Steel Bearing - S6803 2RS	1
4	HUB1009-18	Pro 4 1mm Barrel Spacer	1
5	HUB535	Pawl (set of four)	1
6	HUB515	Pawl spring (set of four)	1
7	HUB1009-5	Pro 4 Drive Side Seal	1

HUB536 - Pro 4 Freehub Assembly 11spd Aluminium

ITEM No.	PART No.	DESCRIPTION	QTY.
1	HUB1009-20S	Pro 4 11 Spd Freehub Spacer - Silver	1
2	17287	17x28x7 Bearing	1
3	S17287	17x28x7 Bearing	1
4	HUB1009-18	Pro 4 1mm Barrel Spacer	1
5	HUB535	Pawl (set of four)	1
6	HUB515	Pawl spring (set of four)	1
7	HUB1009-5	Pro 4 Drive Side Seal	1